

Monteringsanvisning Assembly instructions

A


x 4




M6x90/ø15 SW4

B

x 1

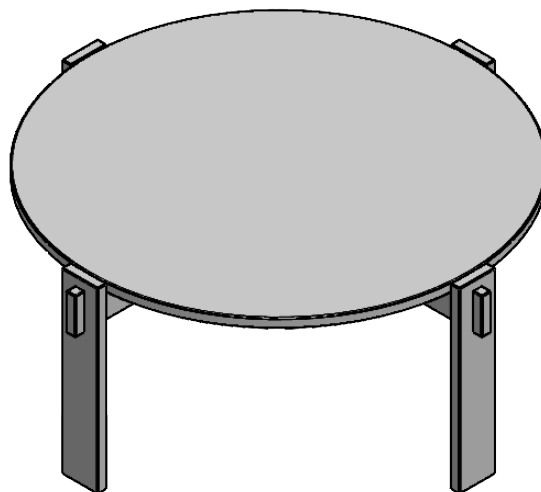

1.

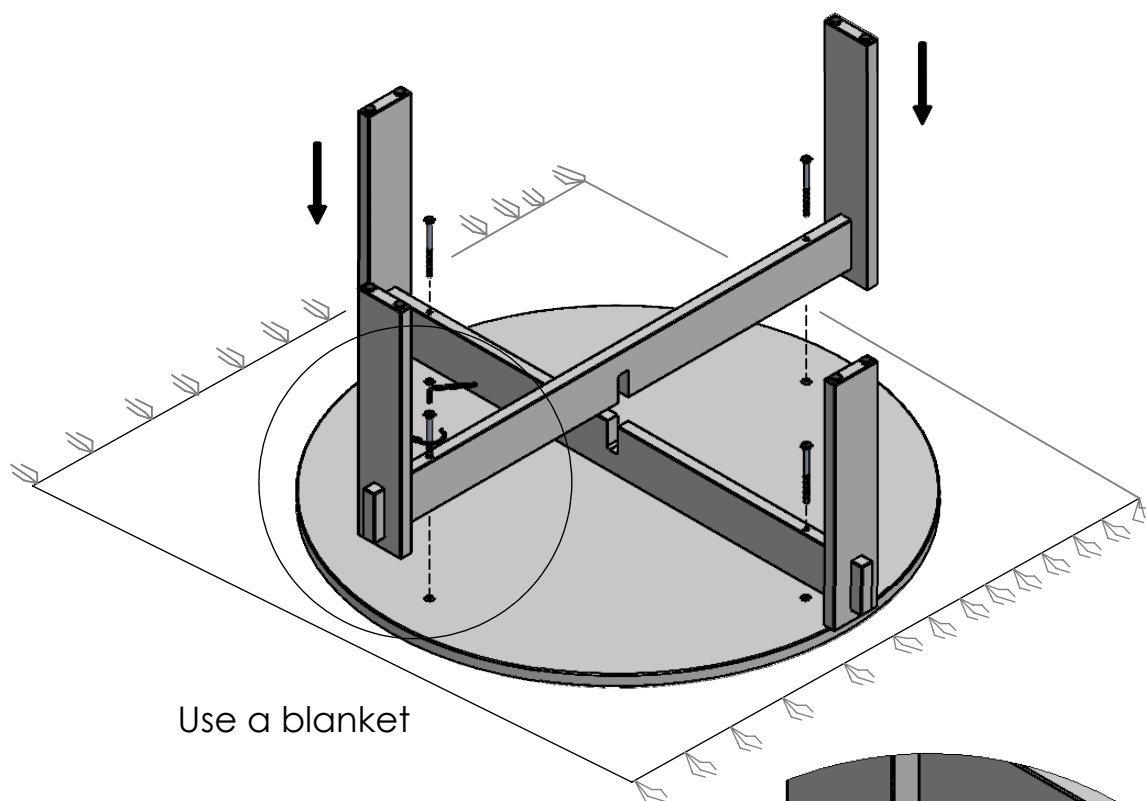

Use a blanket

B

A

